

**NAME**

gotox – a program to operate a rotor of a satellite dish.

**SYNOPSIS**

**gotox** [*options*]

**DESCRIPTION**

This manual page documents briefly the **gotox** commands.

**gotox** is a program to operate a rotor set to tune a satellite dish.

**OPTIONS**

**-h** print this help text

**-d degrees**

Goto the specified angle. Positive value for East rotation, negative value for West rotation on Northern Hemisphere (default 0)

**-a number**

use given adapter (default 0)

**-f number**

use given frontend (default 0)

**-t seconds**

leave power on to rotor for at least specified seconds of time (default 30)

This manual page was written by Uwe Bugla <uwe.bugla@gmx.de>.